

CONNECTOR TYPE:

PLEASE MAKE A SELECTION | - 14

OPERATING VOLTAGE:

NO SELECTION AVAILABLE --14B

(MUST SELECT 12-48 VDC TO GET BATTERY DISCHARGE INDICATOR (BDI) & MAINTENANCE FUNCTIONS)

BARGRAPH FUNCTION:

BARGRAPH FUNCTION (UNITS/SYMBOL): NO SELECTION AVAILABLE

NUMERIC FUNCTION:

NO SELECTION AVAILABLE | - 14E


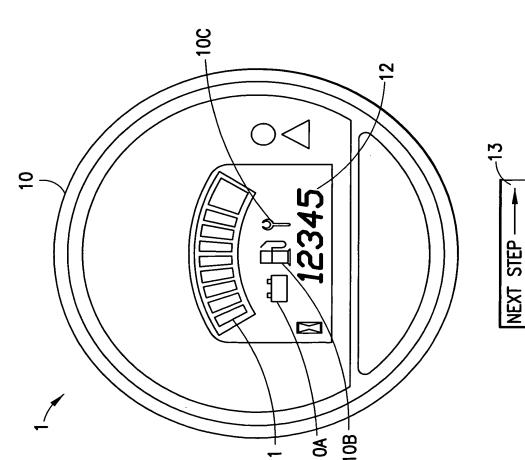


FIG. 1A

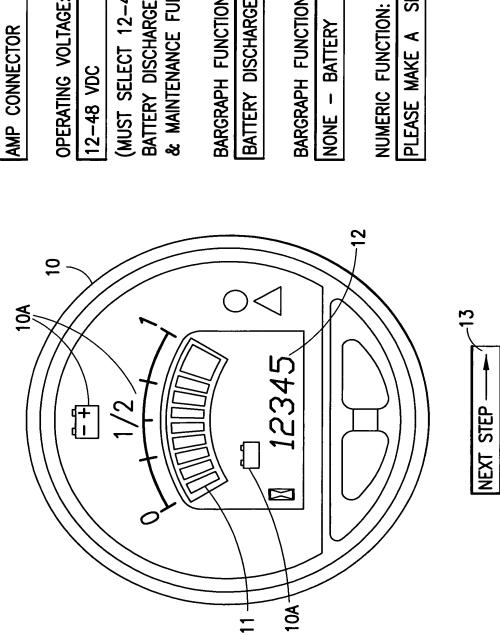

CONNECTOR TYPE:

I
\Delta
TOR
NE(
NOO
0
¥

4

OPERATING VOLTAGE:

Δ	14B	
)	
12-48 VDC		

(MUST SELECT 12-48 VDC TO GET BATTERY DISCHARGE INDICATOR (BDI) & MAINTENANCE FUNCTIONS)

BARGRAPH FUNCTION:

√14C BATTERY DISCHARGE INDICATOR

BARGRAPH FUNCTION (UNITS/SYMBOL): √14D BATTERY

FIG.1B

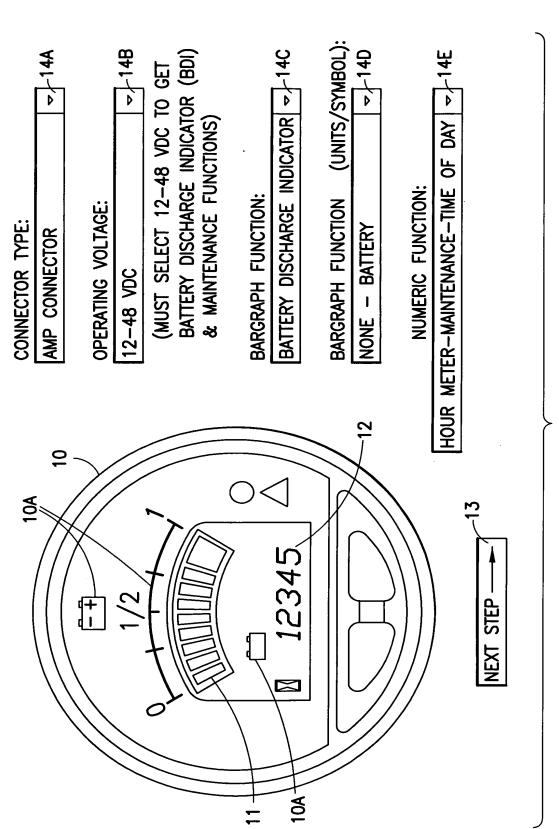


FIG. 1C

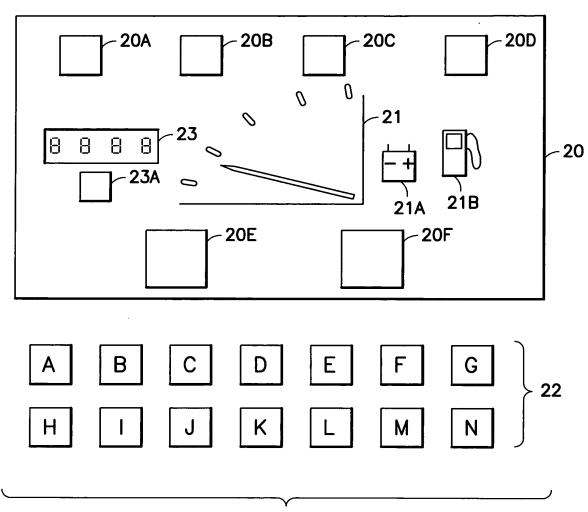


FIG.2A

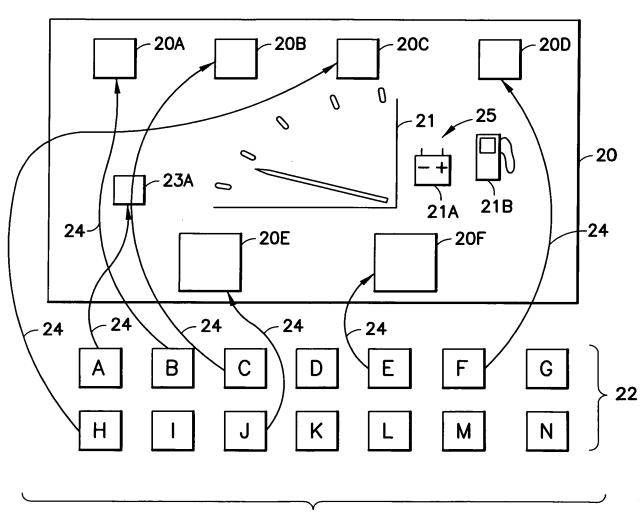


FIG.2B

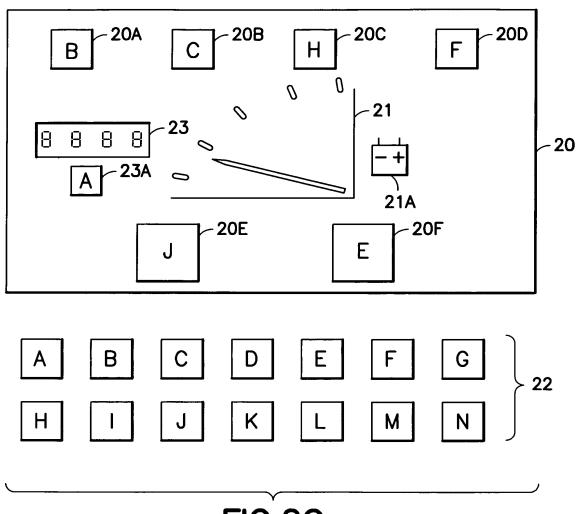


FIG.2C

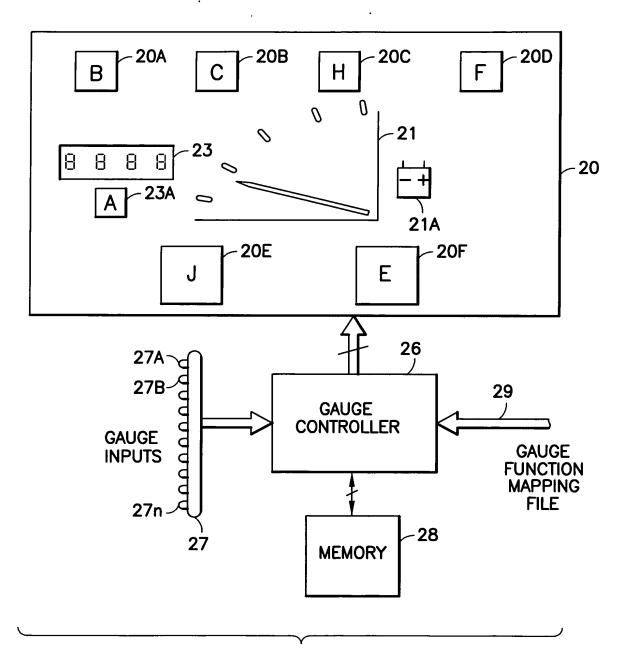
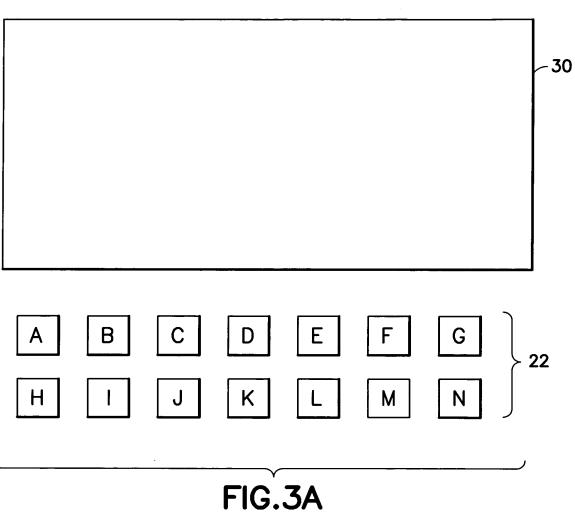


FIG.2D



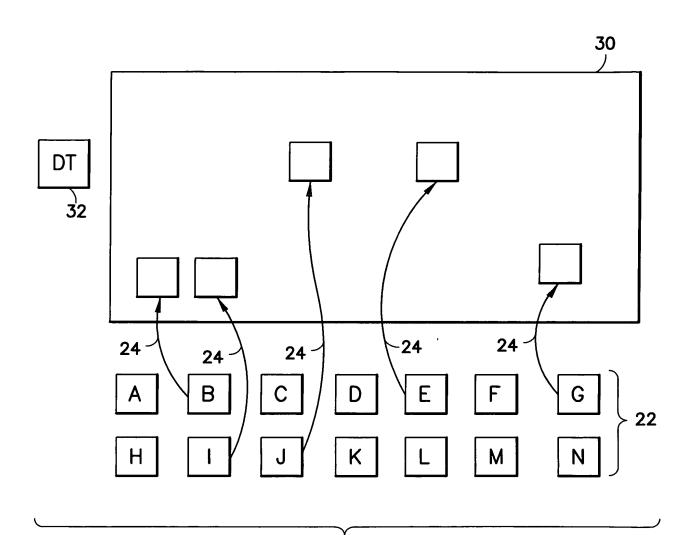


FIG.3B

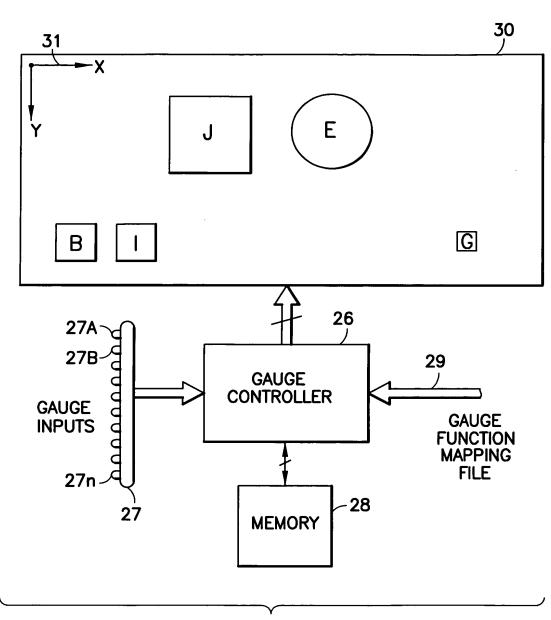


FIG.3C

